JUMITECH



Datasheet DALI to PWM Interface

DT5 Converter Module for the integration of PWM controlled drivers in DALI lighting systems

Art. Nr. 86458508-100



DALI PWM Interface

Overview

- module converting DALI dimming commands into PWM signal
- the module is especially designed to operate with dimmable LED-Driver (with PWM control input, e.g. Meanwell HLG, HLN, NPF or LPF series)
- provides advantage of fail-safe digital signal data communication compared to types with analog output voltage
- transformation of DALI 8-Bit arc power level into PWM signal from 0% to 100%


Specification, Characteristics

- Selection of linear or logarithmic dimming curve (DT5)
- Output range selectable between 0-100% and 10-100% (DT5)
- maximum output current of 100mA (current sink), hence it is possible to connect many PWM controlled drivers
- maximum voltage of 60V at output
- PWM-frequency can be selected by jumpers (488Hz/976Hz)
- The module is supplied directly by the DALI signal line
- galvanic isolation between DALI-input and PWM-output


type	DALI PWM 100mA	_
article number	86458508-100	
supply	via DALI signal line	
typ. current consumption DALI	3.1 mA	
input	DALI	
	0%-100% PWM	
	100mA (sink), 60VDC max.	
output	PWM-Frequency: 488Hz/976Hz 10%	
geometry (l/w/h)	39.7mm / 28.0mm / 14.2 mm	
weight	~10g	
storing and operational ambient		
temperature	-20°C to 75°C	
protection class	IP20	
connecting wire cross section	0.5-1.5 mm ²	_



connection plan

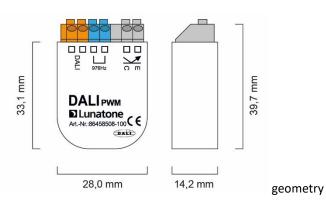

JUMİTECH

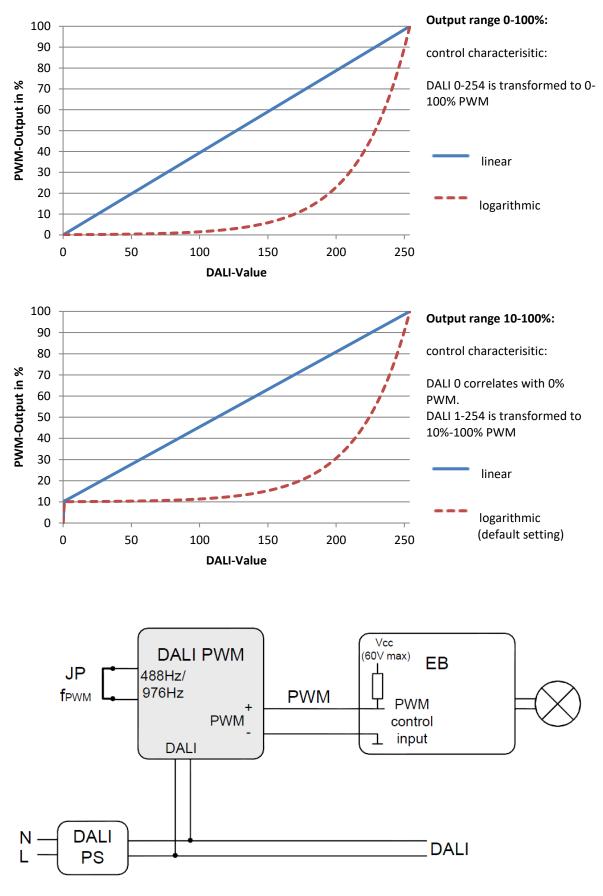

typical structure

Connection

The interface is supplied directly via the DALI signal line. It must not be connected to the mains. A typical value of the current consumption is 3.1 mA. For supplying components on a DALI line the installation of a DALI power supply (DALI PS) is necessary. The connection to the DALI line is polarity free.

The PWM output supports sinking currents up to 100mA. Therefore multiple PWM controlled loads can be connected to the output. The voltage connected to the current sinking PWM output may not exceed 60VDC. The terminals allow cross sections of the connection wire from 0.5 to 1.5 mm².

Function

The DALI PWM interface converts the desired DALI dim level in a corresponding PWMpattern. The conversion curve can be influenced as defined in the DALI DT5 standard (linear/logarithmic control characteristic, 0-100% or 10-100% output range). This relationship is clearly represented by the control characteristic diagram.

The maximum output current is 100mA (current sink).

With the help of a jumper the PWM-frequency on the output can be changed from 488Hz to 976Hz.

DALI instruction set

The DALI PWM is based on the standard for DALI control gear (IEC 62386-102) and device type 5 extension (IEC 62386-206).

Commands and functions referring to the SYSTEM FAILURE LEVEL are not supported. This parameter is used as the dim level that should be applied on the output in case of a DALI line outage. Since the DALI 0-10V is a bus powered device there is no possibility to apply a specific predefined signal on the output without being under power. In the case of a DALI-line outage 100% are applied on the output.

Purchase Information

article number: 86458508-100

DT5 interface module for conversion of DALI signals to a PWM signal (maximum output current 100mA), galvanic isolation between DALI-input and PWM output

similar components:

DALI 0-10V PWM (Art.Nr. 86458508) with PWM output, galvanic isolation between DALIinput and PWM output

DALI 0-10V LE (Art.Nr. 86458508-LE) with analog output, suitable for 0-10V drivers with electrically isolated control input

DALI 0-10V AN (Art.Nr. 86458508-AN) with analog output, galvanic isolation between DALI input and 0-10V output, automatic calibration algorithm

Additional Information

Datasheets and manuals <u>https://jumitech/produkter</u>

DALI-Cockpit – free configuration tool from Lunatone for DALI systems <u>http://lunatone.at/en/downloads/Lunatone</u> DALI-Cockpit.zip

Contact

Technical Support: support@jumitech.dk

Requests: salg@jumitech.dk

www.jumitech.dk





Disclaimer

Subject to change. Information provided without guarantee. The datasheet refers to the current delivery.

The function in installations with other devices must be tested for compatibility in advance.